


Thank you for purchasing the Novopro CDJ WS1 WORKSTATION



This user manual will help you to assemble this product safely & quickly, so please spend a few minutes to read through this assembly information.



NOTE: WE HIGHLY RECOMMEND THAT TWO PEOPLE ARE AVAILABLE FOR STEP 4 OF THE ASSEMBLY STAGE.

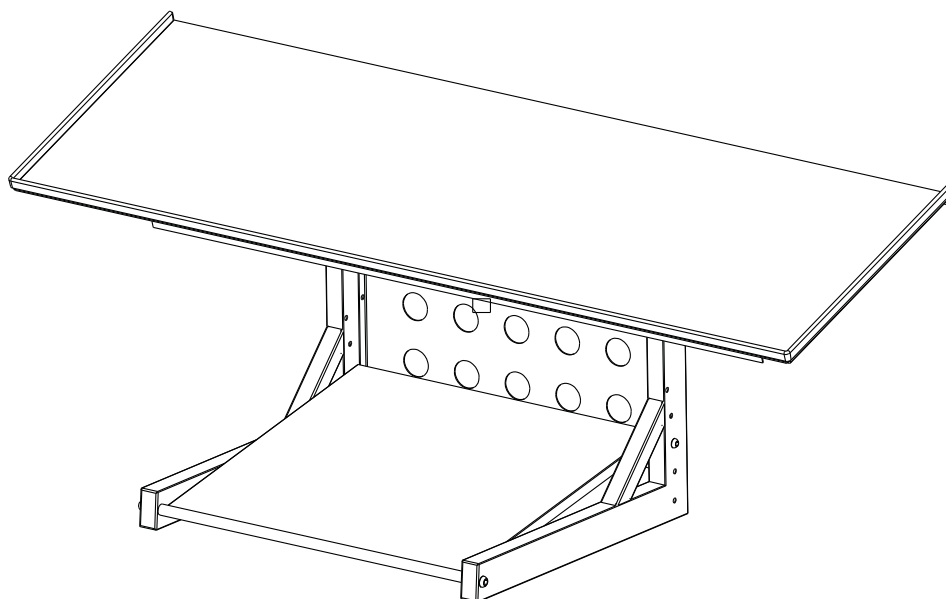Due to continuous product developments, please check for the latest updated version of this product manual at: www.novopro.co.uk




Novopro CDJ WS1 WORKSTATION


The contents of the WS1 are:

	1	Top plate
	1	Middle back panel
	1	Right L-shape leg
	1	Left L-shape leg
	1	Mixer shelf
	1	Steel half circle
	1	Foam pad
	1	Foam pad
	1	Rubber edging
	1	Cable clamp
	6	Cable clamp
	6	M8*40 bolt
	4	Washer
	4	Nut
	6	M6*10 bolt
	2	M6*40 bolt
	1	M4 allen key
	1	M5 allen key
	1	Wrench
	1	Small cover
	1	Big cover
	6	Non-slip rubber feet
	1	Round tube


Step 1

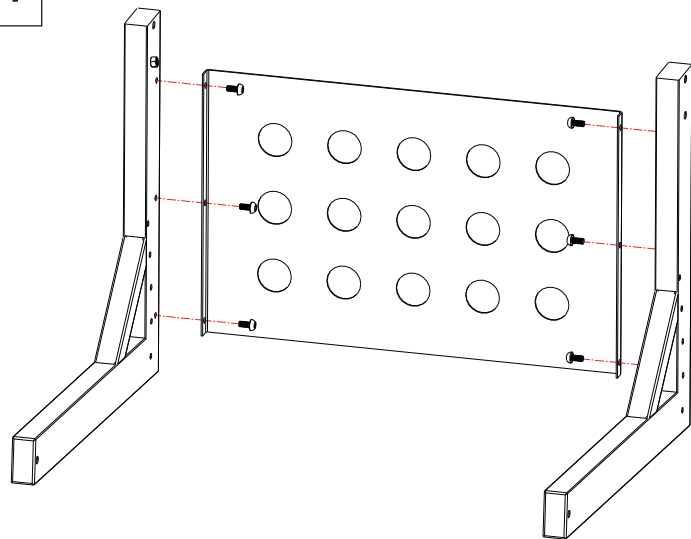


Position the two L-shape legs and insert the 6 x bolts through the middle back panel. PLEASE LEAVE THE VERY BOLTS LOOSE AT THIS STAGE – DO NOT TIGHTEN UNTIL THE FINAL END STAGE.

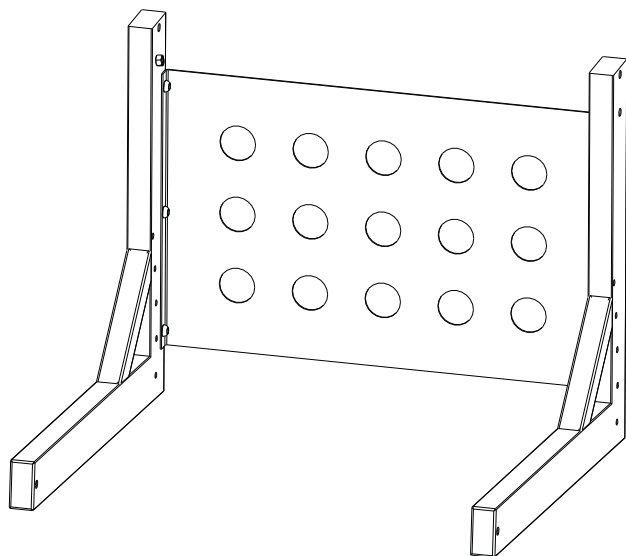


Step 2

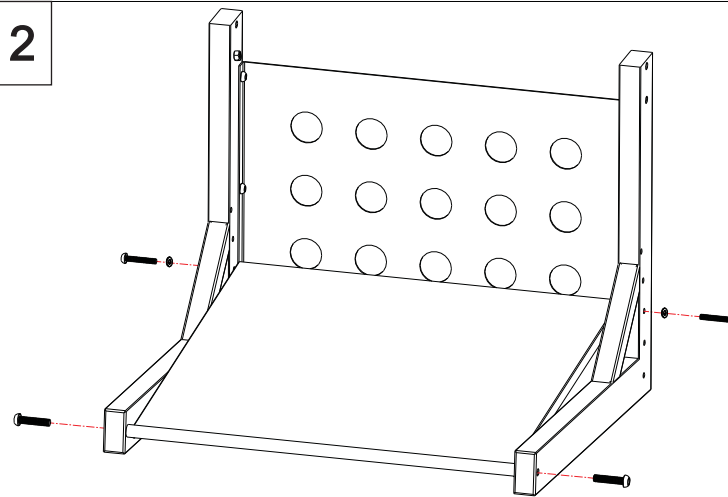


Mount the mixer shelf between the two L-shape legs after you have selected the desired mixer angle from the 5 mounting positions and insert the bolts and washers as shown above. PLEASE LEAVE THE VERY BOLTS LOOSE AT THIS STAGE – DO NOT TIGHTEN UNTIL THE FINAL END STAGE.

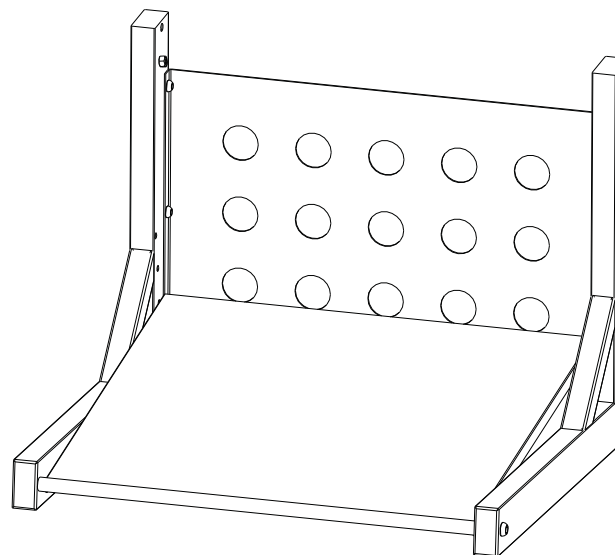


Step 3

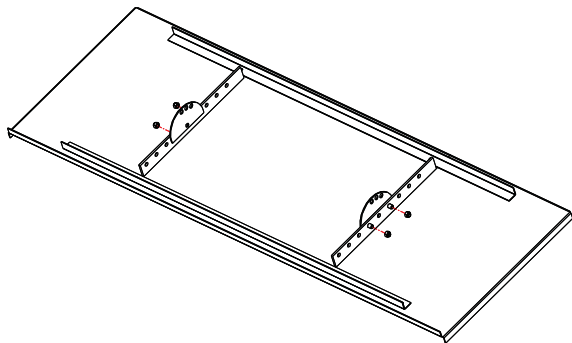

Now position and bolt in the two steel circular plates to the top plate; it is at this point that you select the depth of the top shelf before you bolt on these plates. **IMPORTANT:** these circular plates must be mounted on the **INSIDE** of the rail and the holes in the circular plates **MUST FACE** towards the **FRONT** edge of the top plate – as shown in the image above)

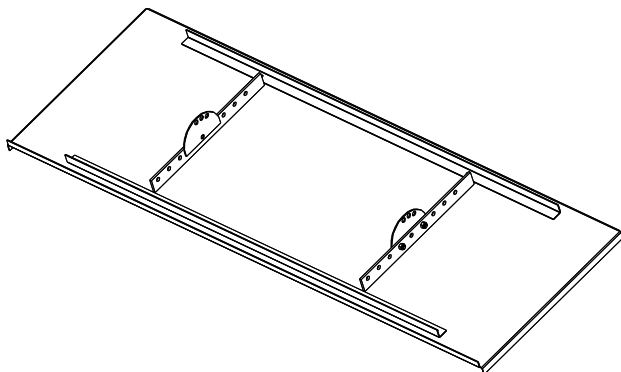


Step 4

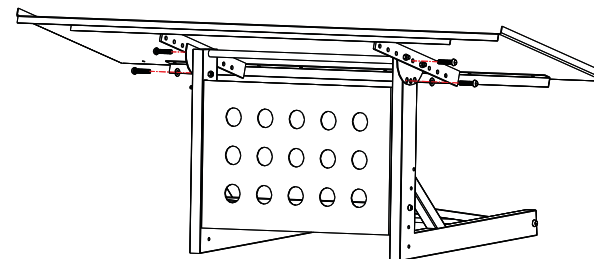


NOTE: THIS STEP WILL REQUIRE TWO PEOPLE IN ORDER TO HOLD AND ASSEMBLE THE WS1. DO NOT ATTEMPT THIS STAGE WITHOUT ASSISTANCE.


Position the round tube in the top middle section of the two L-shape legs. The bolt fits through the central hole on the circular panel. As shown, the angle of the shelf is now selected from using the pre-drilled holes and the other two bolts and washers lock this angle in place.

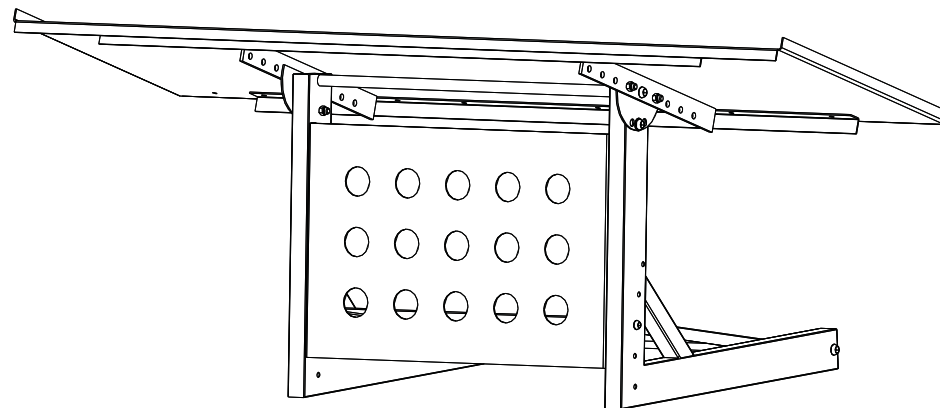

Step 5

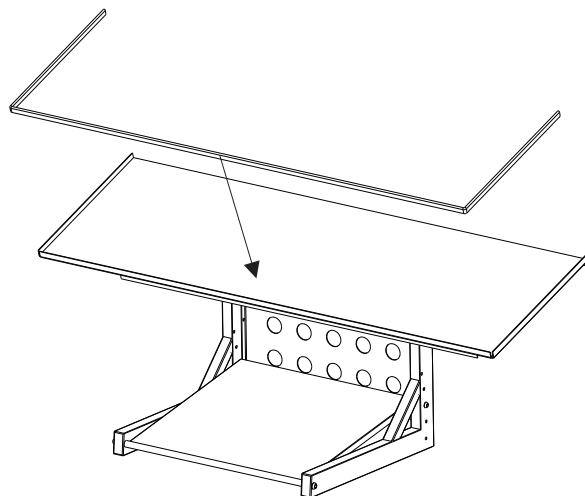


Attach the rubber protection edging to the lip of the top plate. You may need to lay the edging in place first and bend the corners to assist the fixing around the corners.

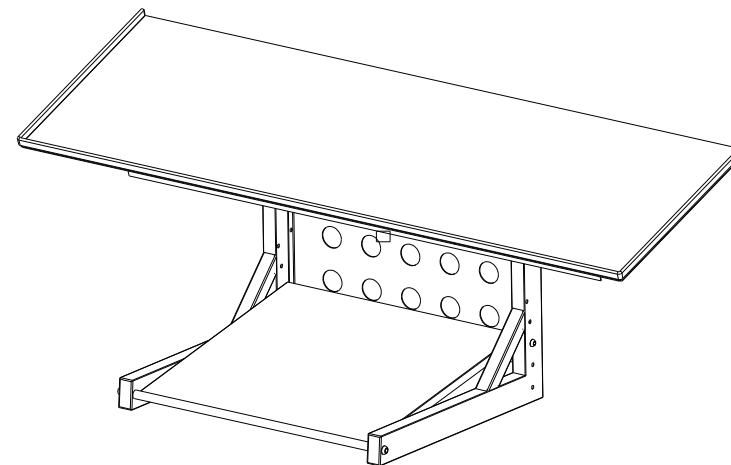

Now securely tighten all the bolts - BUT DO NOT OVERTIGHTEN AND THREAD THE SOCKETS.
A cable clamp is included to position where required.
Your Novopro WS1 is now ready to use and we hope you enjoy the use of this product.

Step 6

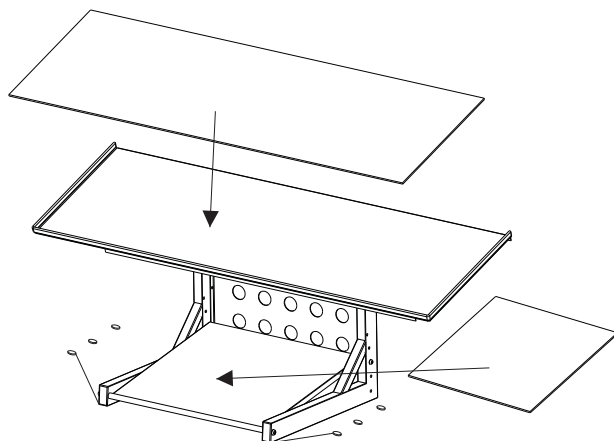

If required, attach the double sided foam EVA pads to the top and bottom panels and attach the non-slip rubber feet to the underside of the frame as shown.

All Novopro products are thoroughly QC checked prior to dispatch but should you have any queries or questions then please contact your place of purchase or contact us at: info@novopro.co.uk

novopro

Novopro is a trade only supplier and only supply wholesale to trade resellers.

*Novopro products are designed and engineered in the UK and manufactured in China.
Email: info@novopro.co.uk Web: www.novopro.co.uk*

Due to continuous product developments & improvements, specifications and appearance are subject to change.

© Copyright Novopro Ltd 2014. E&OE.